
11 SERIES INTERNAL HOUSING ASSEMBLY INSTRUCTIONS

- 1. REMOVE THE RETAINING RING HOLDING THE LIFT CYLINDER ASSEMBLY INSIDE THE INTERNAL HOUSING.
- 2. REMOVE THE LIFT CYLINDER ASSEMBLY FROM THE INTERNAL HOUSING.
- 3. DROP THE LIFT CYLINDER ASSEMBLY DOWN FROM THE TOP, COMPLETELY THROUGH THE CUSTOMER SUPPLIED EXTRUSION.
- 4. INSERT THE LIFT CYLINDER ASSEMBLY INTO THE INTERNAL HOUSING AND REATTACH THE RETAINING RING.
- 5. INSERT THE ASSEMBLED INTERNAL HOUSING ASSEMBLY, WITH THE INTERNAL MOUNTING PLATE AND LIFT CYLINDER ASSEMBLY ATTACHED, UP INTO THE BOTTOM OF THE EXTRUSION.
- 6. ATTACH THE INTERNAL HOUSING MOUNTING PLATE TO THE BOTTOM OF THE EXTRUSION USING FOUR CUSTOMER SUPPLIED SELF THREADING SOCKET HEAD CAP SCREWS.
- 7. ATTACH FOOT TO THREADED ADAPTER.

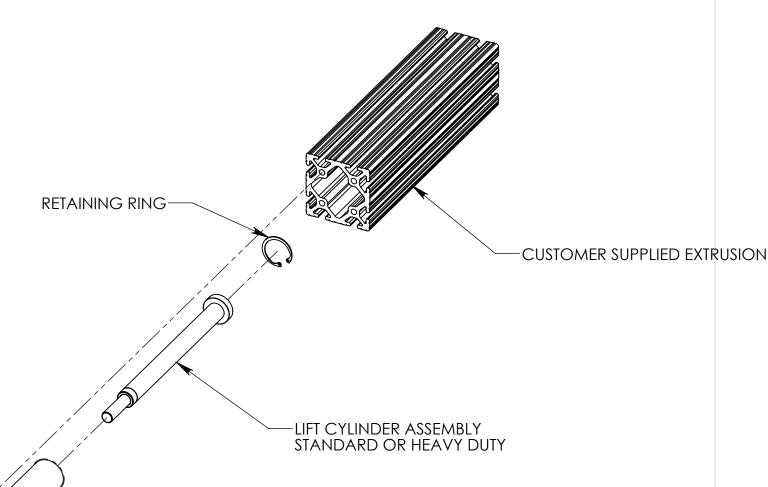

INTERNAL HOUSING ASSEMBLY CONTAINS SUPPORT TUBE AND LIFT CYLINDER-

CUSTOMER SUPPLIED SELF THREADING SOCKET HEAD CAP SCREWS 4X

INTERNAL CYLINDER MOUNTING PLATE

Distributed by Ergonomic Partners, Inc.

sales@ergonomicpartners.com www.ergonomicpartners.com Tel: 314-884-8884

	REV
THIS PRINT IS THE	NON-SPECIE
PROPERTY OF	TOLERANC
BUCHER	.XX ±.0
HYDRAULICS INC.,	.XXX ± .00
AND IS NOT TO	FRACT. ± 1
BE USED DIRECTLY	ANGLES ± 1
OR INDIRECTLY IN	
ANY WAY	BREAK EDO
DETRIMENTAL TO	.005010
OUR INTEREST	REMOVE BU
	[MILLIMETE
	INCH

DESCRIPTION									
TED ES: 10	DESCRIPT INTER ASSEM	NAL LIFT CY		SIZE: B					
05 /32 /2°						REV BY:			
GES	h	BUCHEF	₹	CUSTOMER:		REV DATE:			
RRS	GRAND RAPIDS, MI USA		DATE: 7-16-12	DRAWN BY: MHS	EWR:				
ER]	DO NOT SCALE	SHEET 1 OF:1	D	RAWING #: DC-11-SE	RIES	REV:			